## SF-SK02 有线遥控器操作说明

## 1. 接线定义



- ▶ D0----D4 数据线, V----24V 电源正, G----24V 电源负
- ▶ 连接系统 25 芯输入端
  - D0—— 5 脚 (25 芯输入) D1—— 18 脚 (25 芯输入)

  - D2---6脚 (25芯输入)
  - D3---19 脚(25 芯输入)
  - D4── 7 脚 (25 芯输入) V── 24V (外接 24 正)

  - **G**—— 24G (外接 24 负)

## 2. 按键定义



按键序号	按键名称	按键功能
1	Ι	启动加工
2	0	暂停加工
3	K1	强电 K1 键/示教功能(焊直线)
4	K2	强电 K2 键/示教功能(圆弧中)
5	K3	强电 K3 键/示教功能(圆弧末)
6	K4	强电 K4 键/示教功能(空移)
7	K5	强电 K5 键/送丝
8	K6	强电 K6 键/退丝
9	K7	强电 K7 键/示教功能(进一步)

10	K8	强电 K8 键/示教功能(退一步)
11	K9	强电 K9 键/辅助
12	切换	使用 6 轴控制的时候 用于轴切换 X/B Y/C
13	F+	焊接速度上调控制键
14	F–	焊接速度下调控制键
15	1	(Y+)前进
16	Ļ	(Y-)后退
17	Ļ	(X-)向左
18	<b>→</b>	(X+)向右
19	Υ.	枪头 A+方向运动
20	$\searrow$	枪头 A-方向运动
21	7	枪头 Z+方向运动
22	4	枪头 Z-方向运动
23	~	进给倍率快速调整,按一下 5%,再按一下 80%

## 3系统界面更改 LOGO 图片

更改界面 LOGO 操作注意三点:

- 第一, 图片是 24 位位图的 BMP 格式,名称 LOGO。
- 第二, 2060/2600 系统图片为 800\*480 像素分辨率。
- 第三, 把 LOGO. BMP 图片放到 U 盘, 依次按 G、G、9 按键, 提示更改 LOGO, 按 回车键。